


Talea Touch Plus Quick Start Guide

Use these directions to get your machine up and running quickly.
Read the entire user manual, though, to thoroughly understand your new espresso machine.

Parts of the Machine



Touch Screen Display

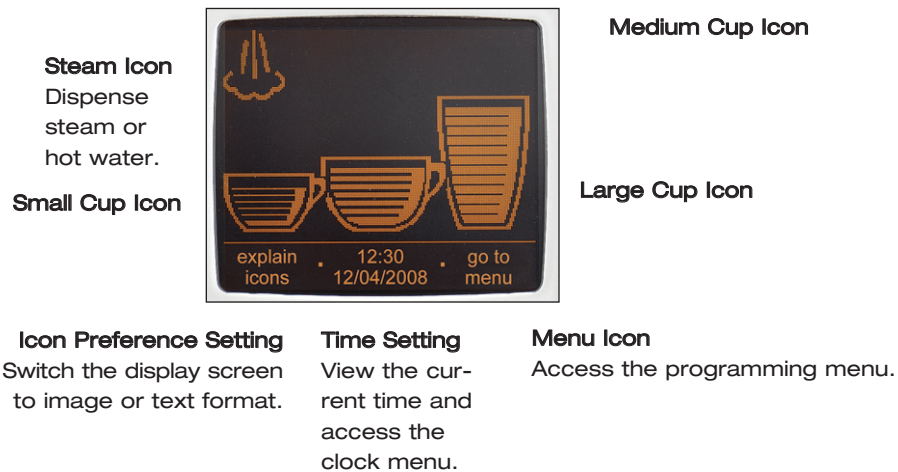

Setting Up the Machine

Fill Water Tank

- Remove water tank (Fig. 1) and install Intenza water filter using the provided directions.
- Fill water tank with fresh water and replace back in machine.



Fig. 1

Fill Bean Hopper

- Open bean hopper lid and fill with whole espresso beans*. (Fig. 2)
- Replace bean hopper lid.



Fig. 2

Attach Power Cord

- Attach power cord to machine and plug the other end into an outlet.

Prime Water Circuit

- Place container under the dispensing head.
- Press ON/OFF button to turn machine on. (Fig. 3)
- The machine will automatically perform a rinsing cycle. A small quantity of water will be dispensed.
- The cycle will be completed automatically.



Fig. 3

Brew Espresso

- Your machine is now ready to brew fresh, delicious espresso.
- Place a cup under dispensing head and press a brew button. (Fig. 4)

** Please note, this machine has been inspected and tested. For this reason, you may find a slight amount of grounds in your machine.*



Fig. 4

Contact Us

For more detailed instructions on how to operate the espresso machine, please refer to the user manual. If further assistance is needed, please contact Saeco Customer Service:

Saeco USA

call: 1-800-933-7876
email: supportsaecousa@philips.com
visit: www.saeco-usa.com

Saeco Canada

call: 1-514-385-5551
email: info@saeco.ca
visit: www.saeco.ca

To Order Parts and Accessories

visit: www.saecooutlet.com